



IMPORTANT SAFETY PRECAUTIONS

Basic safety precautions should be followed when using electrical appliances, especially when there are children.

In order to avoid electric shock follow the following rules:

- Before cleaning the electrical appliance, unplug it from the mains.
- Do not use the electrical appliance in a bath or shower. Do not drop it into water or other liquids.

Do not touch an electrical appliance that has fallen into the water! Unplug it immediately.

In order to prevent a burn, fire, or injury:

- Use this appliance only for the purposes described in this operations manual. Do not use devices that are not recommended by the manufacturer.
- Never leave this electrical appliance plugged in unattended.
- When an electrical appliance is used by children or persons with disabilities, it must be carefully supervised.
- Never operate the electrical appliance if the cord or plug is damaged.
- Keep the cord away from hot surfaces. Do not pull or bend the cord. Do not wrap it around the electrical appliance.
- Do not drop the electrical appliance. Do not insert foreign objects into its holes.
- Make sure that the blades are properly adjusted before using this appliance.

Warranty obligations:

1. The manufacturer guarantees the operation of the product under the conditions of transportation, storage, and operation.
2. The warranty covers all damage to the product probably caused by a manufacturing defect.
3. The warranty does not cover mechanical damage to the product.
4. The warranty period of the product is 12 months from the date of sale.

The warranty does not cover the following products:

- Products, if malfunctions in them have arisen as a result of the violation of the rules of operation and transportation.
- Damage caused by overuse, improper handling, improper storage or maintenance, and improper blade removal.
- Components worn out during operation and having a limited service life (POWER CORDS, brushes, plastic leashes, etc.)
- Damage caused by getting foreign objects, substances, and insects in.
- Self-repair of the product or repair carried out in non-specialized workshops.

The consumer loses the warranty service rights in the following cases:

- at the expiration of the warranty period;
- in the presence of mechanical damage to the outer parts of the product;
- in case of violation of the rules of operation.

Cleaning and lubrication of products and sharpening of blades after any period of operation are not included in the cost of warranty service.

You must show the documents certifying the purchase of this product, this product manual with the signature of the seller, and the stamp of the trading organization to get the warranty repair.

« _____ » _____ 20__ year

« _____ » _____ 20__ year

Seller Signature


Seller Signature

Place for stamp

Place for stamp

MUSTANG

Hair clipper MPF-01 CARBON GT

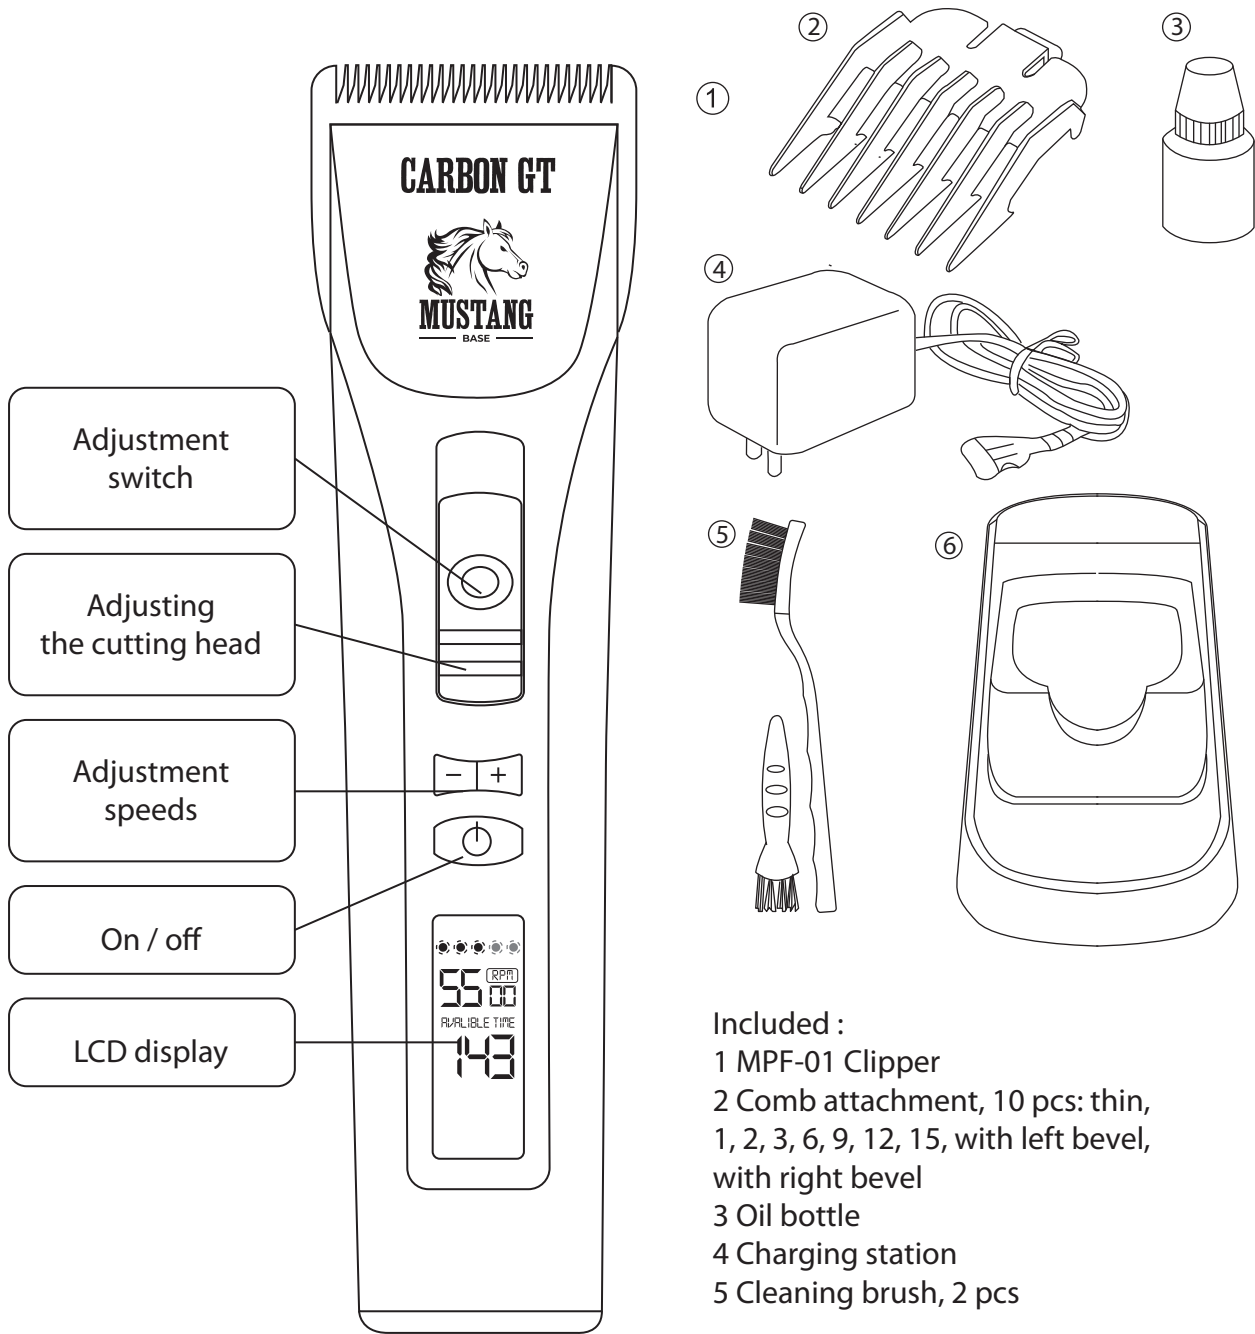

- Included :
- 1 MPF-01 Clipper
 - 2 Comb attachment, 10 pcs: thin, 1, 2, 3, 6, 9, 12, 15, with left bevel, with right bevel
 - 3 Oil bottle
 - 4 Charging station
 - 5 Cleaning brush, 2 pcs

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ




Hair clipper	Motor	Working voltage: 3.7 V Motor rotation speed: 6800 RPM
	Battery	Battery capacity: 2500 mAh Charging time: 2,5 hours Working time: 3 hours
Adapter		Input: 100 – 200 V, 50 – 60 Hz Output: 5 V, 1000 MA

MUSTANG

OPERATIONS MANUAL




Attention! Before first use, the device must be charged within 3-4 hours.

Cutting head adjustment:

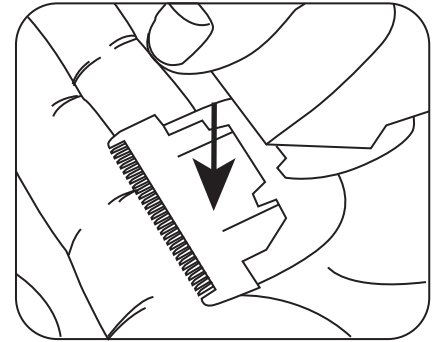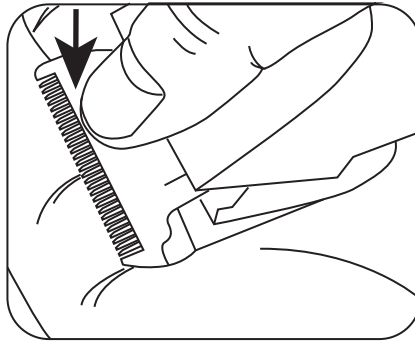
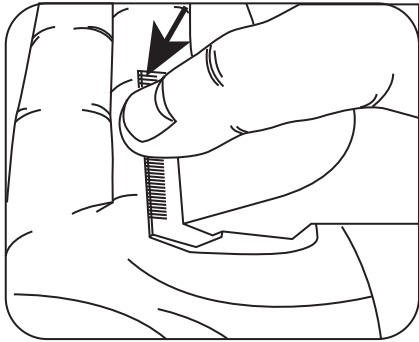


- 1) Press the middle part of the cutting head with your thumb.
- 2) Then firmly pull the cutting head down.
- 3) Remove the cutting head with the other hand.

 Installing the cutting head

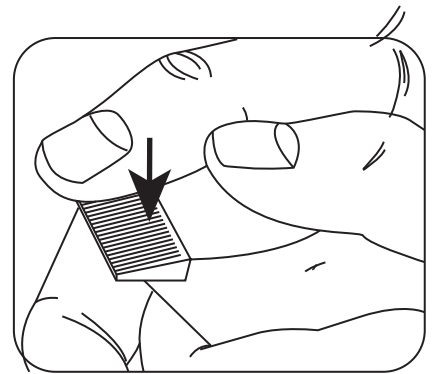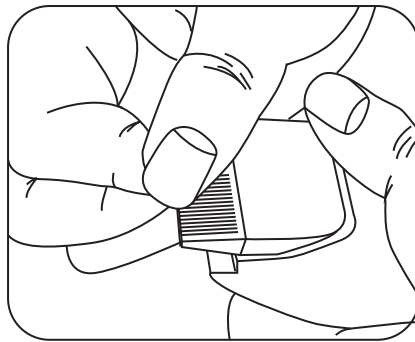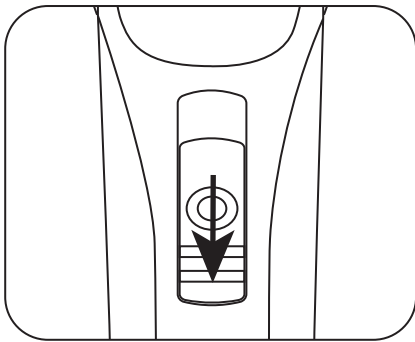

- 1) First adjust the position of the cutting head to 2 mm by sliding the switch to the lower position.
- 2) Align the blades.
- 3) Then press down, and you will hear a characteristic click, then the installation will be completed.

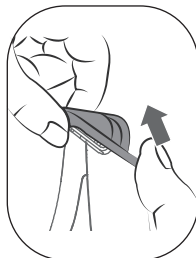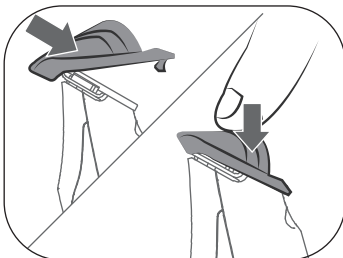

Installing/removing the comb attachment

- Align the cutting head and the front notch of the comb attachment first.
- Then press down firmly on the comb and you would hear a distinctive sound.
- To remove the attachment, push the back of the attachment away from the device.

After cleaning the device and installing the blades, it must be lubricated. For this, you need to drip a few drops of oil, which comes with the device or is sold separately. Then you need to turn on the device for 10 seconds so that the lubricant is evenly distributed over the blades.

If there are any problems with the blades from the very beginning, literally from the first haircut, then disassembling the device is not necessary. It is enough to clean the blades with a brush, loosen the bolts a little, and then align them. After that, tighten the bolts to the stop. If the adjustment does not help and the device still cuts badly, we ask you to contact an authorized service center to determine the reasons for the incorrect operation of the device.

Use of the docking station

- 1) Can be used directly on the desktop.
- 2) Can be hung on the wall.

When using the docking station in a hanging position, first secure the mounting part to a stationary object with the bolts, and then align the groove on the back of the docking station and secure it with a downward movement.

Warning

1. Do not disassemble the device yourself.
2. This device is not washable with water. Please keep it away from the wet environment when using it.
3. The device should only be cleaned with a material slightly soaked with water or mild soapy water.
4. Do not charge the device at temperatures above 40°C or below 0°C.
 - The device will become slightly warm during use or charging, this is not a fault.
 - Please use the original charging cord.

Fault recovery

If the device is not working or not charging correctly, please check the following:

- Check for power availability at the power outlet by plugging in another device
- Make sure the device is not connected to a power source when it automatically turns off
- Make sure that the contacts between the device and the power adapter are clean and free of hair or other contaminants.
- Make sure the cutting head is installed correctly
- Make sure your device is fully charged

Disposal

At the end of the device's life, do not dispose of it with household waste. Dispose of the device properly to help protect the environment.

- Before throwing the device away, the battery must be removed.
- When removing the battery, the device must be turned off.
- The battery must be disposed of in a special way.

Disposal of the used battery.

The built-in rechargeable battery contains substances that may pollute the environment. Before disposing of the device, it is recommended that you contact your dealer or an authorized service center to dispose of the battery.